




UserManual English


ROCKSTAR

PORTABLE VIBRATION SPEAKER SYSTEM


ROCKSTAR portable vibration speaker takes music from your device and generates it into vibration sequences. Revolutionize the way you listen to music.

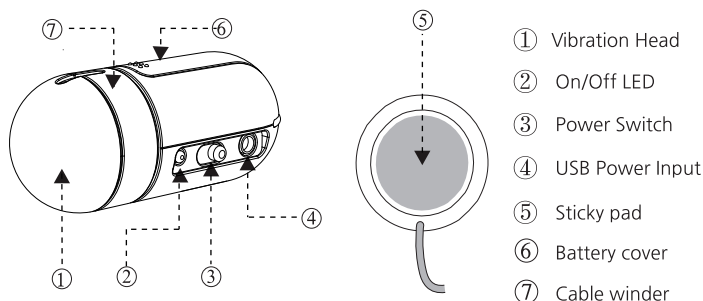


■ Installation : Please use after reading the instructions carefully for easy use.

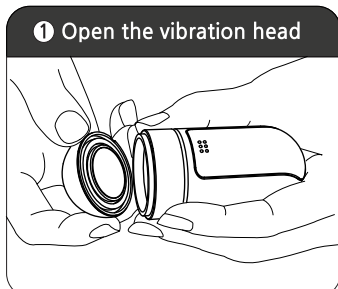


Hold the cable winder between your thumb and index finger, and open the vibration head with the other thumb. *1)

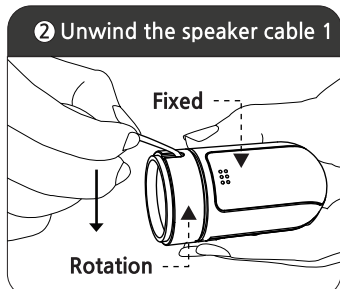


Hold the speaker body and then unwind the speaker cable clockwise or counter clockwise. *2)

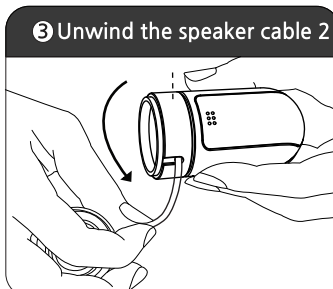


Hold the cable winder and then pull the vibration head.

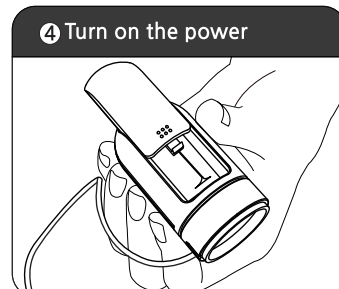


Insert 2 AAA batteries into the battery and then turn on the power switch, or use USB Power. *3)

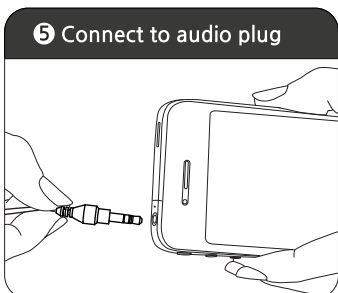


Pull out the 3.5mm audio jack from the speaker body and connect it into your audio device. You can control the volume on your audio device. *4)

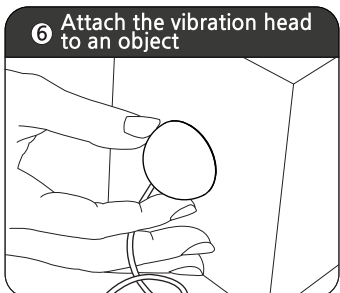

Tear off the protective film and then attach the vibration head to a hollow object such as empty boxes, plastic cups *5).

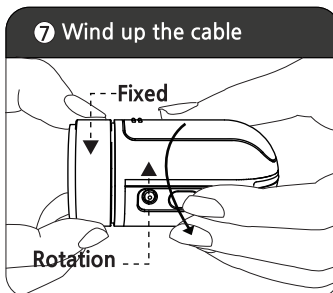

After using speaker, wind up the cable by holding the winder with one hand and turn the speaker body with the other. *6)

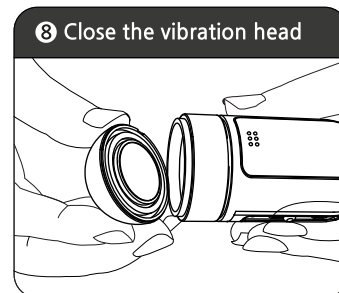


After winding up the cable, reattach the vibration head to the winder.

- *1) When opening the vibration head, you must hold the winder between your thumb and index finger and pull the vibration head off with your other thumb.
- *2) When unwinding the cable, do not pull the cable too tightly or else it might break. A red line will appear at the end of the cable when you have completely unwound it.
- *3) Insert the batteries and be sure to match +/- with the appropriate direction.
- *4) If the sound is too noisy or loud, then turn the volume down to 80~90% of the volume capacity. If the audio jack is too short, then use an extension cable.
- *5) When detaching the head from the object, do not pull too strongly and pull it off at a 45 degree angle, or else the vibration module might fall off. If the sticky pad gets dirty, you can use wet tissue or wet your finger and wipe the dirt and dust off gently. Then the sticky pad can be restored to 95% of its original stickiness when dry.
- *6) Do not wind the speaker cable too tightly when winding up the cable.



■ Application

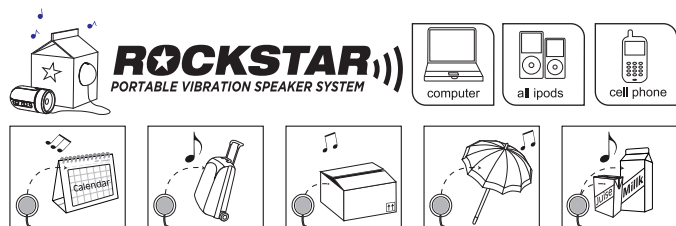

Turn any object into a speaker and amaze your friends and family.

■ Trouble Shooting

- If no sound comes out, check that power switch is ON and power indication light (green) lights up.
- If the sound is too noisy or loud, turn the volume down to 80~90% of the volume capacity.
- If the audio jack is too short, use an enclosed audio extension cable.
- If the sticky pad is damaged, change to the enclosed extra sticky pad. When detaching the sticky pad from the vibration head, do not pull it off too strongly, or else the vibration module might fall off.